

Power Drain Trap – Strainer with Ball Valve

Strainer with cleaning valve

[WRST – Series]

◎ Special Feature

◎ The installation in the front of trap is certainly necessary.

◎ No need another valve as the picture show the service valve is in the strainer

◎ Impurities such as scale can be discharged by opening the cleaning valve on the strainer



Specifications

MODEL	INLET SIZE	OUTLET SIZE	Cleaning V/V	Using Comp.	Using Temp.
WRST-15-I	1/4" ,1/2"	1/4"	1/4"	0 ~40 kgf/cm ²	2 ~ 70 °C
WRST-15-Y	1/2"	1/2"			
WRST-20-Y	3/4"	3/4"	3/8"		

Dimensions

